

AXENT.ONE C PLUS E414

INSTALLATION INSTRUCTIONS



SAFETY SYMBOLS

The following warning signs warn you of dangerous situations and their severity:



DANGER! High Risk, Lethal Hazards, Severe Injuries



WARNING! Medium Risk, Severe Injuries



CAUTION! Low Risk, Minor Injuries



NOTE! Damage to Property

TARGET READERSHIP AND INSTALLER QUALIFICATIONS

Installation must be carried out by qualified professionals. Repairs should only be performed by trained and qualified persons.



NOTE!

Follow all local installation regulations and country specific voltage and plumbing standards. DO NOT install the intelligent toilet in rooms where there is a danger of frost. The room temperature and water temperature must not be less than 4°C (39°F).

Condensation may form when the intelligent toilet is brought from a cold location to a warm one. Leave the unit switched off for a few hours before operating.



DANGER!

Risk of fatal electric shock

The appliance must be grounded and plugged into a GFCI outlet.

DO NOT remove individual components from (inside of) the intelligent toilet.

If the unit has a damaged cord or plug, return the product to a service center for repair. The cord or plug may only be changed by qualified personnel.




CAUTION!

 
DO NOT reuse old hoses. Please use new hoses and included components. Axent Corp is not liable or responsible for damaged caused by 3rd party components

 
TECHNICAL SUPPORT

For any questions or any assistance with this product, please contact your dealer or call us at 1-949-250-4576 support@axentproducts.com www.axentbath.us

Standard delivery contents

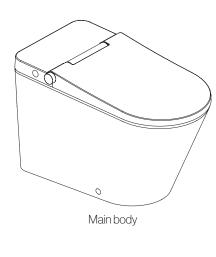





Remote Control

 


Installation template Adhesive









Fixed support Mounting Hardware



Fixed support



Holder and Rubber plug



User Manual

 






Bowl Plug







Installation Manual

Inlet Hose and Filter (Filter Adapter Requires 3/8" FIP Connection.)

Battery

Anti-theft Screws




The below parts are not included with the toilet.




Base Flange


INSTALLATION

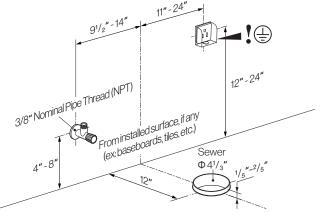


Please verify these dimensions before beginning installation. These dimensions may vary in some locations. Recommended operating pressure 20 - 108 psi.

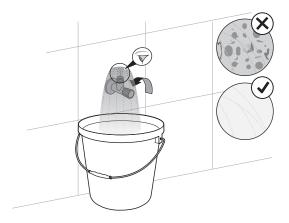



Please run water until clear.

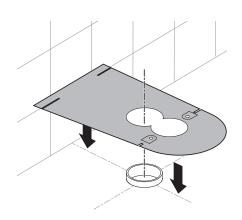

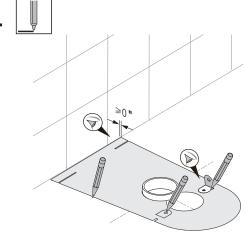



To ensure the normal maintenance work, please make sure that the distance between the wall and the product meets the requirements.

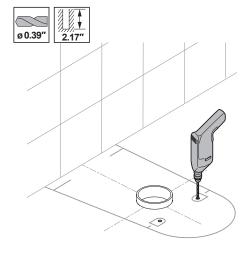


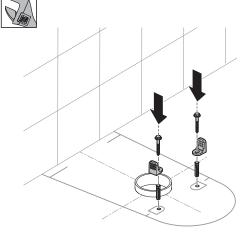





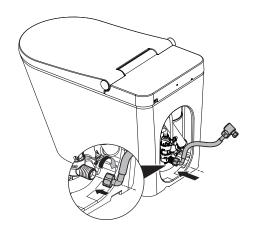


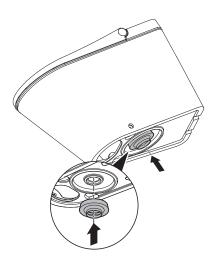


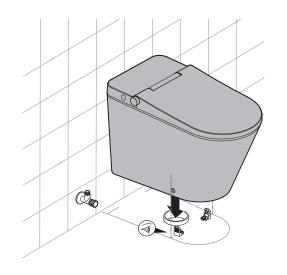


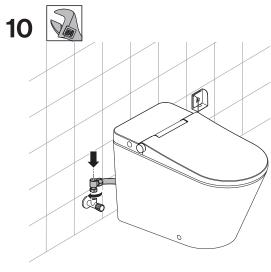

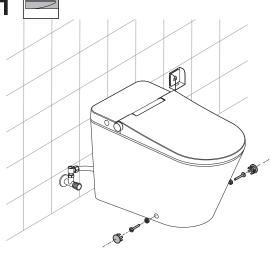


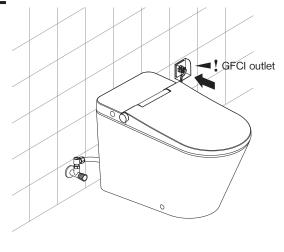


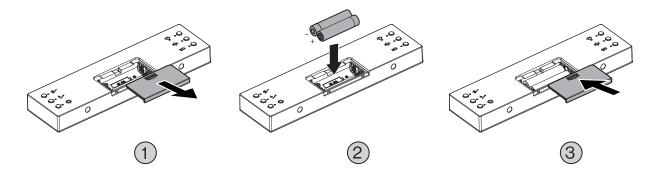


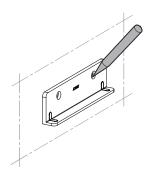



3 Ø 0.24" 1.26"

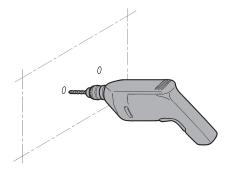

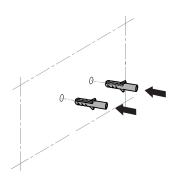

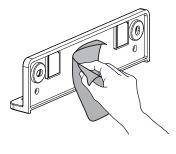


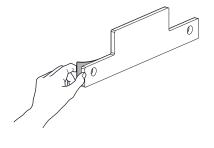

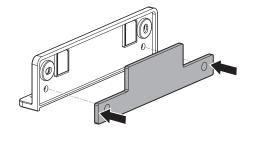





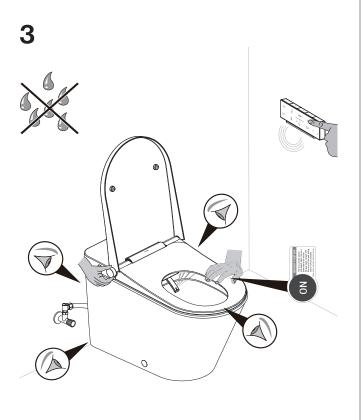

Please check for leaks before caulking.

AXENT Intelligence Inc.

www.axentbath.us support@axentproducts.com 1-949-250-4576